



**THANK YOU FOR YOUR PURCHASE!**

FOR ANY QUESTIONS PLEASE REACH OUT TO:

[info@cfmotousaparts.com](mailto:info@cfmotousaparts.com)

(845) 5-CFMOTO

(845) 523-6686

9AM-5PM EST Mon-Fri


**OUR FRIENDLY STAFF IS READY TO ASSIST YOU**

# PLEASE READ


## **IMPORTANT NOTE TO CUSTOMER:**

In the CFORCE 400 section of the instructions, they state that six CFConnect quick release bases are required for the CForce 400, but this is incorrect. The two in the center are not needed, only the four corners. After finishing the instructions you will see the locations they are actually needed.

**-CURRENT POWERSPORTS TEAM**

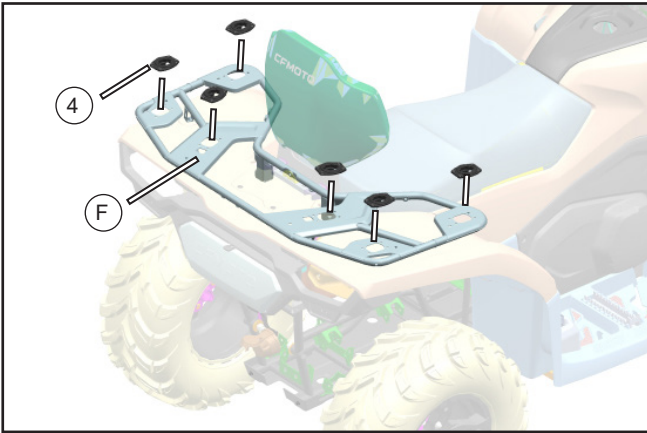
**ASSEMBLY and INSTALLATION**


**CFORCE 400:**  
 // Install 6 quick release base assemblies (4) on the rear rack(F) as shown.

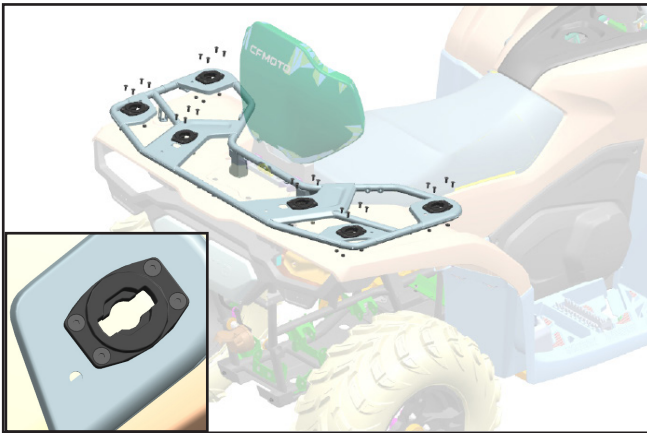


**CFORCE 400:**  
 // Install the screws and bolts to secure quick release base assy.

**i** - CFORCE 400 Only. Base assemblies are purchased separately.

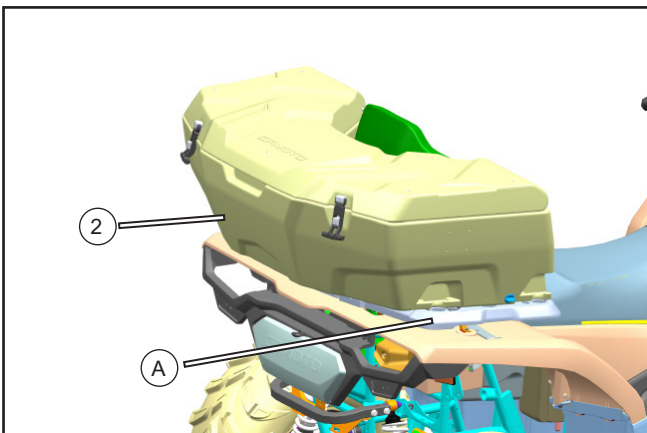

**CFORCE 400 and 500:**  
 // Put rear cargo box (2) onto the rear rack (A), and align the quick release hole of cargo box (2) with assembly position on rack (A).

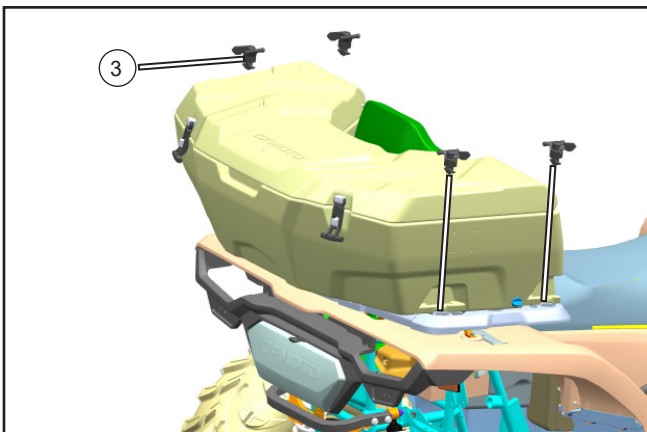

// Install the CF connect clamp (3) at corresponding positions, and turn them anti-clockwise to lock them.